




INSTALLATION MANUAL

CHAIN LINK FENCE WITH "D" FENCING POST, Ø50mm AND Ø70mm AVAILABLE

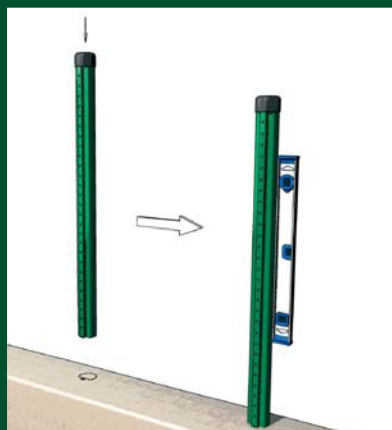

Dpost



Cranked Dpost

1. Insert (concrete in):
 - Starter post with one strut.
 - Corner post with two struts.
 - In cases of straight section of 50 metres or more, install a reinforcement post with two struts.
 - Intermediate post every 2.5 – 3 metres.


2. For cranked fencing posts, stretch the barbed wire to one of the ends and attach to the other end without applying too much tension. Three rows is advisable.



3. Set the tension wire (2/3 rows) with radisseurs. Tighten always from the bottom to the top. For fencing posts with extension arms, apply tension to the barbed wire afterwards.

4. Attach the mesh to the starter post, fix using Hogrings and unroll the mesh, stapling it at each intermediate, reinforcement, and corner post. The starter post can also be installed with a tension bar without staples, using the starter wire clamp.

5. Tighten all the wire stretchers again, always working from the bottom to the top.

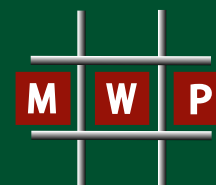

Moncaster Wire Products Ltd.

Cavatorta House
Tattershall Way
Fairfield Industrial Estate
Louth

Lincolnshire
LN11 0YZ

Tel: (01507) 600666

Fax: (01507) 600499

Web: www.moncaster.co.uk
Email: sales@moncaster.co.uk